


Base 2000XL

Mounting instructions




1. Drill a 14 or 19 mm hole. To secure good grounding, clean the underside of the sheetmetal before mounting.
2. Insert the base (A) from the inside (E). Use the enclosed mounting straw to hold the base in position in the hole. Make sure that the base is properly centered in the hole. If the hole is 19 mm then use the enclosed washer (C).
3. Make sure the rubber seal is in the groove of the nut (B). Tighten the nut 3–3.5 Nm. Antenna key 32487 (D) is suitable in order to obtain this torque.
4. Attach the radiator.

A.

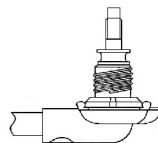

Base

B.

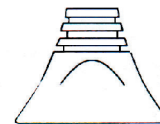

Nut with seal

C.




Washer

D.



32487

E.

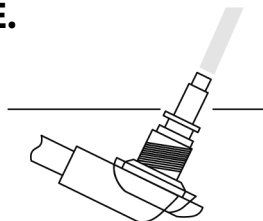

SMARTEQ™
WIRELESS TELECOM

SMARTEQ Wireless AB
Enebyberg, Sweden
info@smarteq.se
www.smarteq.com

